

 
robotistan




Robotic Arm Assembly Guide



Part list

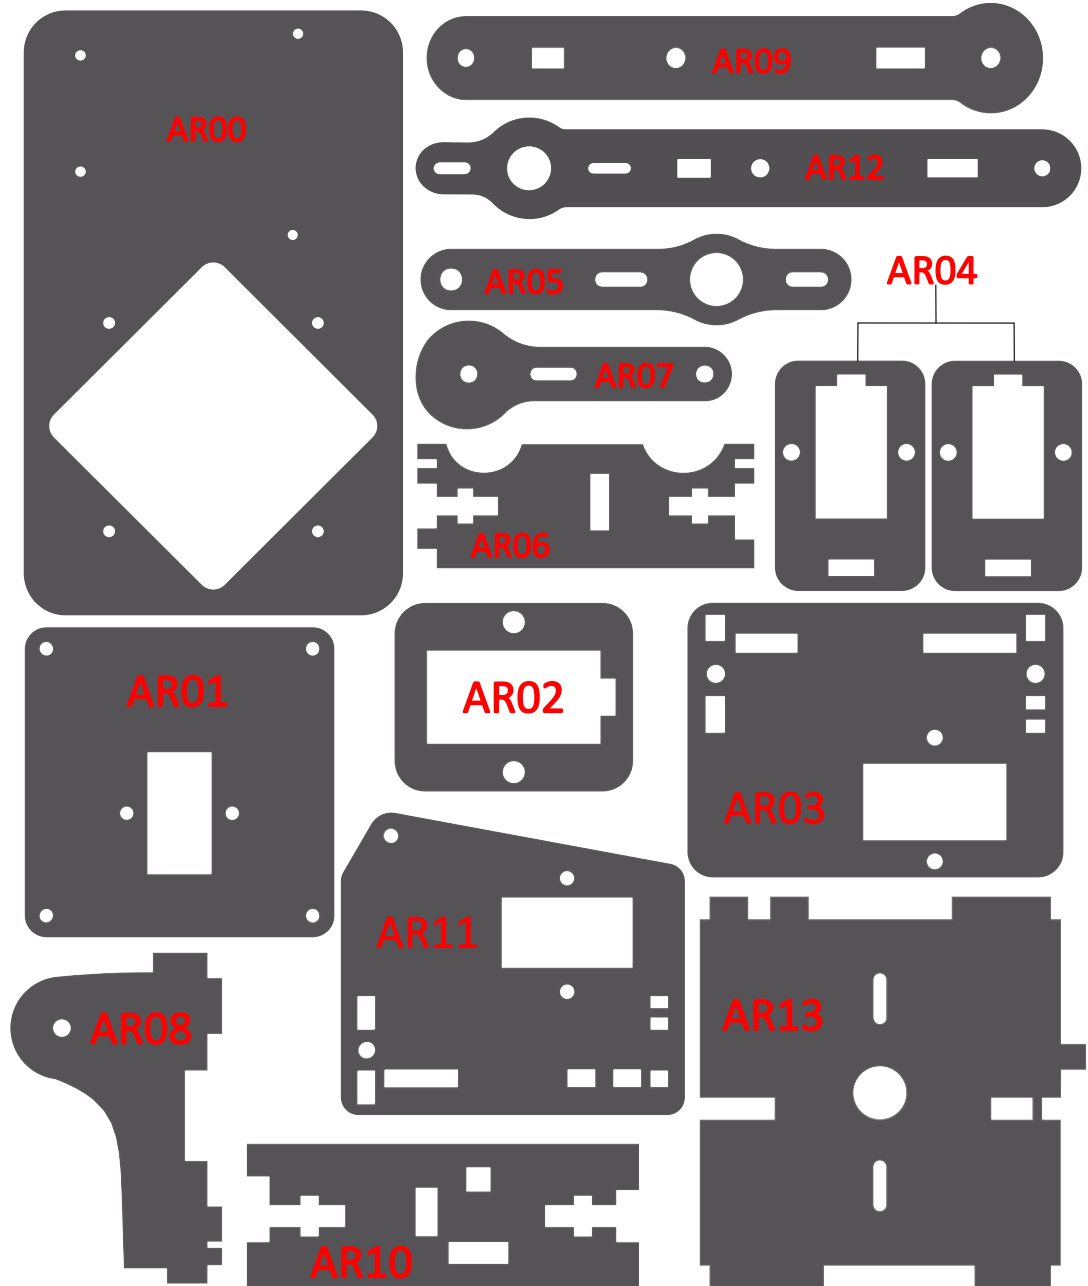

Part list

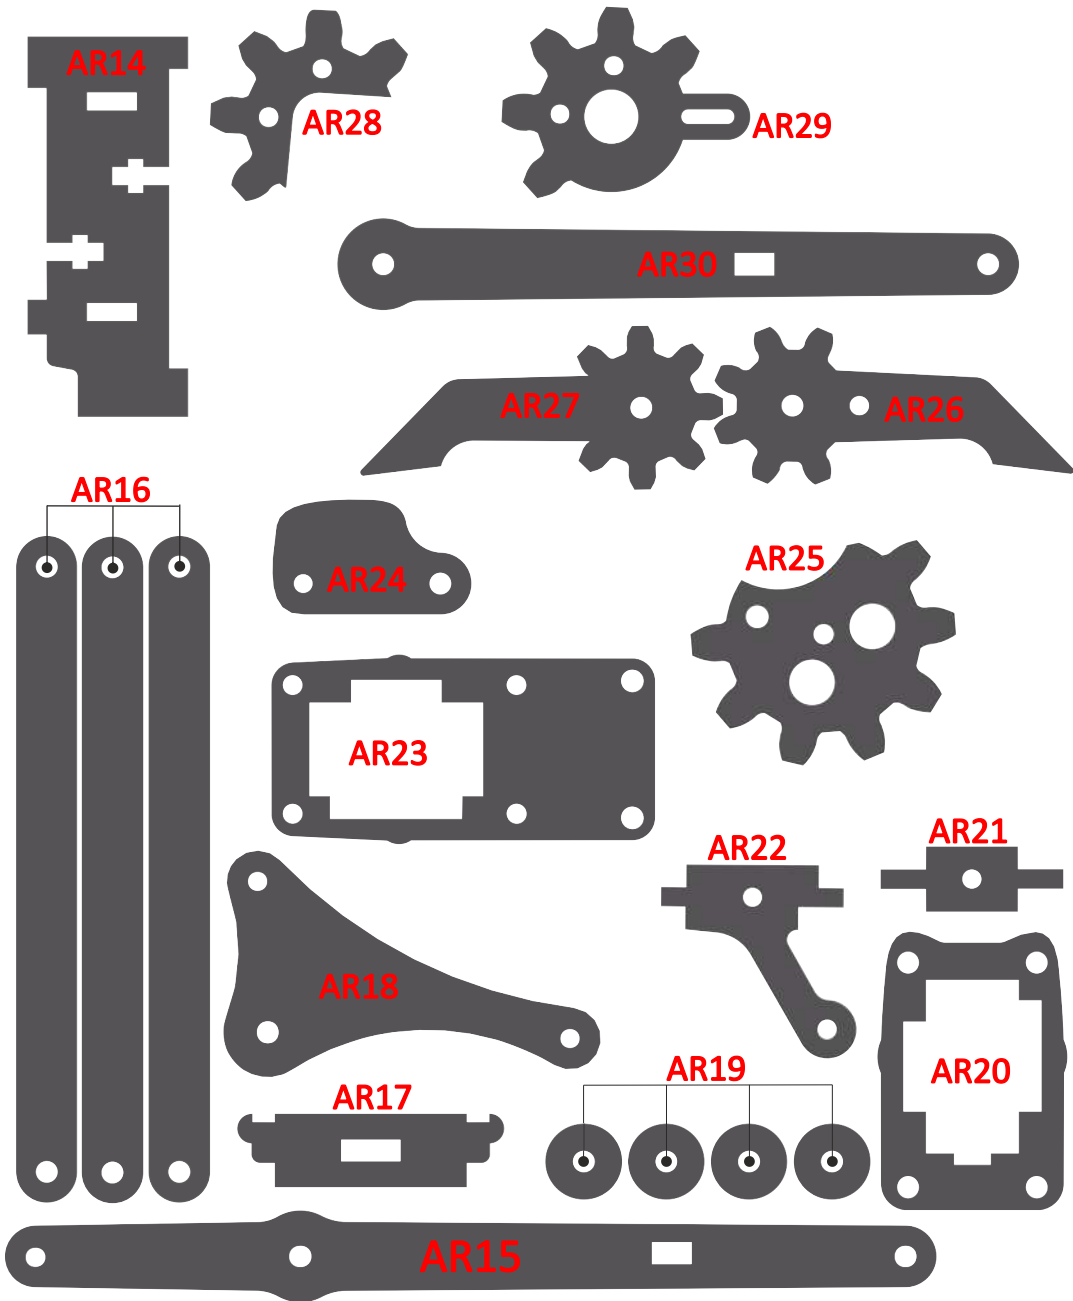 

Assembly Steps - Tuning up the servo motors.

Servo Motor Position Adjutment

Before starting the assembl, you have to manually adjust the angles of the servo motors. Otherwise, Solar X will not work properly.



Atach the servo arm to the servo, then slowly turn the servo arm clockwise unntiit stops. It is not a problem if the servo arm is not the same as the angle shown in the image above. The important thing here is that you have found the last note of the servo.





 
 
 

Remove the servo arm from the servo and repositionit perpendicular to the servo body as shown.



Slowly turn the servo arm counterclockwise untilit is parallel with the servo body, as in the image. When this operationis done, it means that the servo motor is in the center position. It is important that you apply this process to the 2 servo motors in the set. Afer processing the two motors, remove the servo arm and set aside for assembly.

Assembly Steps - Before getting started

These are the needed fastener components and their quantity for building your robotic arm. 2.5 screwdriver is needed for construction components. additional screw's for servo motor mounting and servo horns are included in their specific package.


Fasteners	
	■ M3 Nut - 10 pcs.
	■ M3x 6mm - 6 pcs.
	■ M3x 8mm - 15 pcs.
	■ M3x 10mm - 3 pcs.
	■ M3x 12mm - 8 pcs.
	■ M3x 20mm - 4 pcs.

* The dimensions of fasteners are 1/1 scale if this document printed in A5 booklet format.

Assembly Steps


①

 AR00

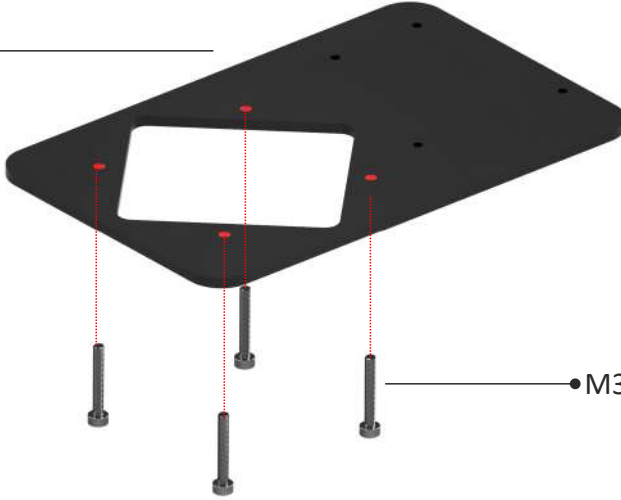

M3x20mm - 4 pcs.

 ②

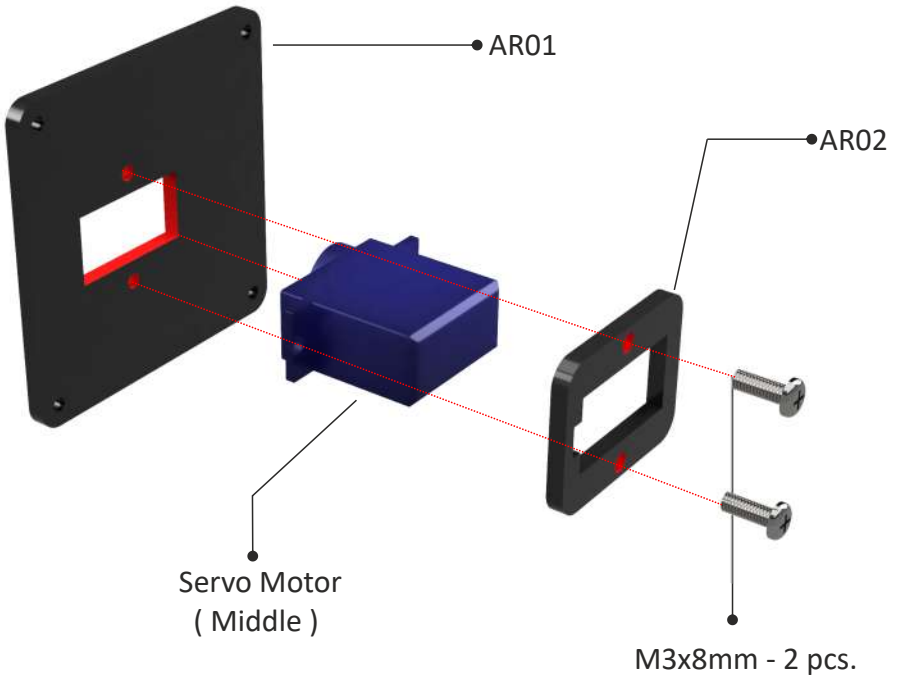



AR01

AR02

Servo Motor
(Middle)


M3x8mm - 2 pcs.

  Assembly Steps

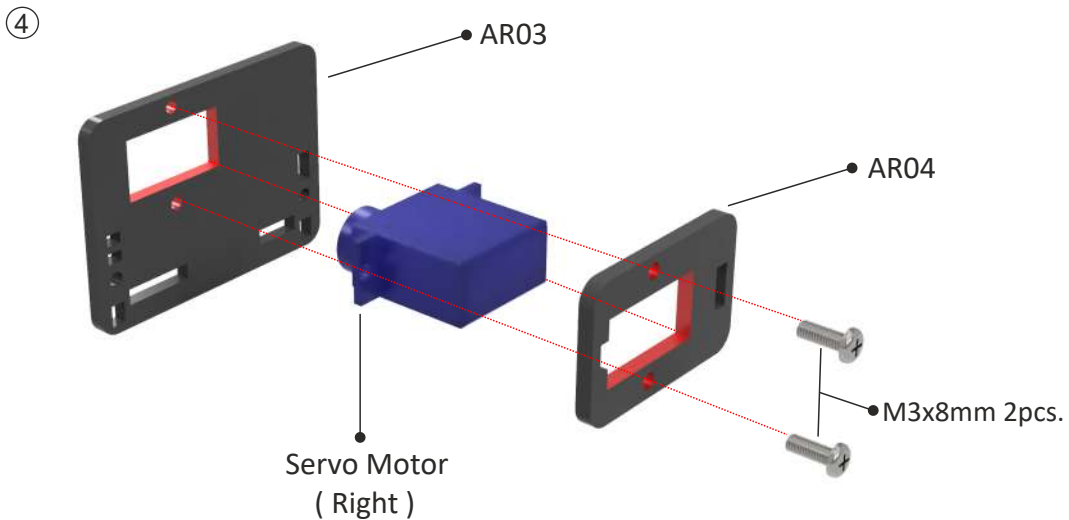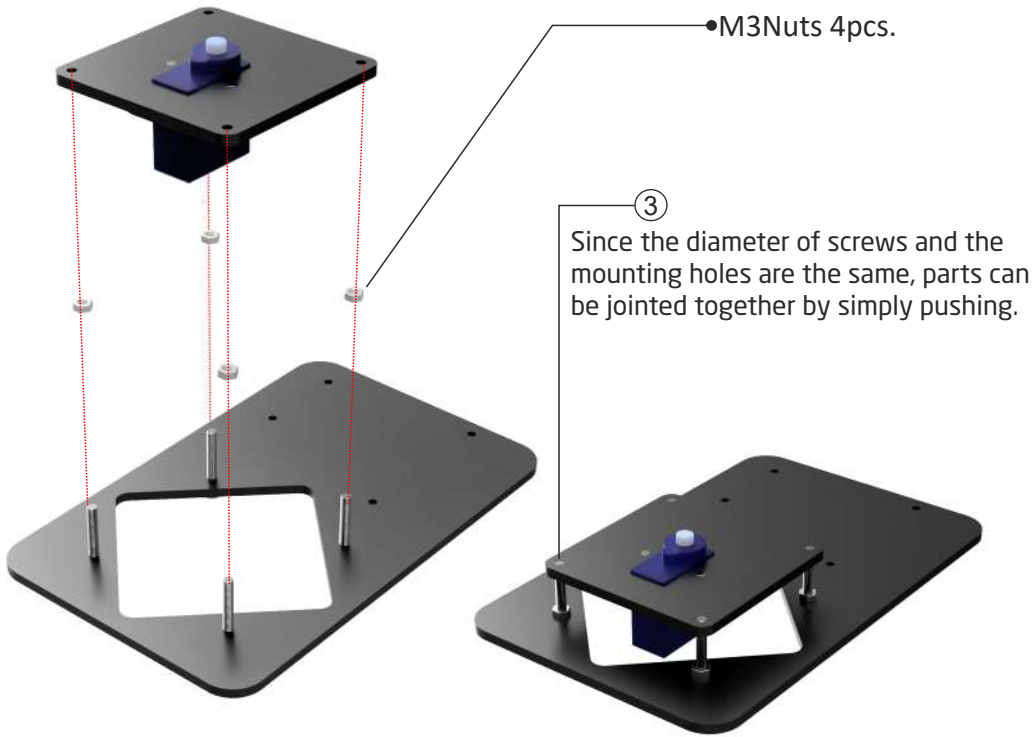


Assembly Steps

 ⑤

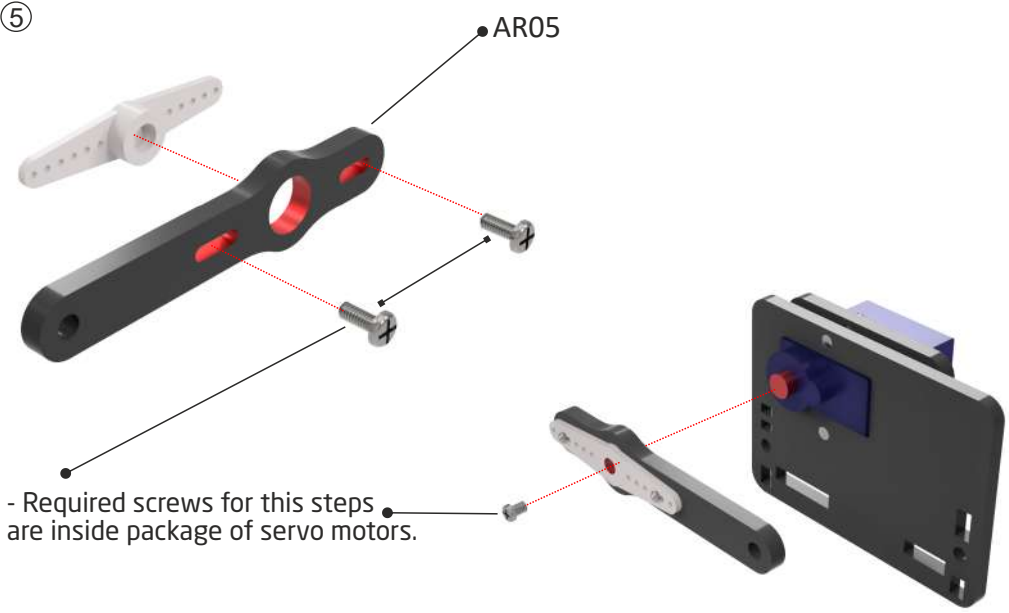


⑥

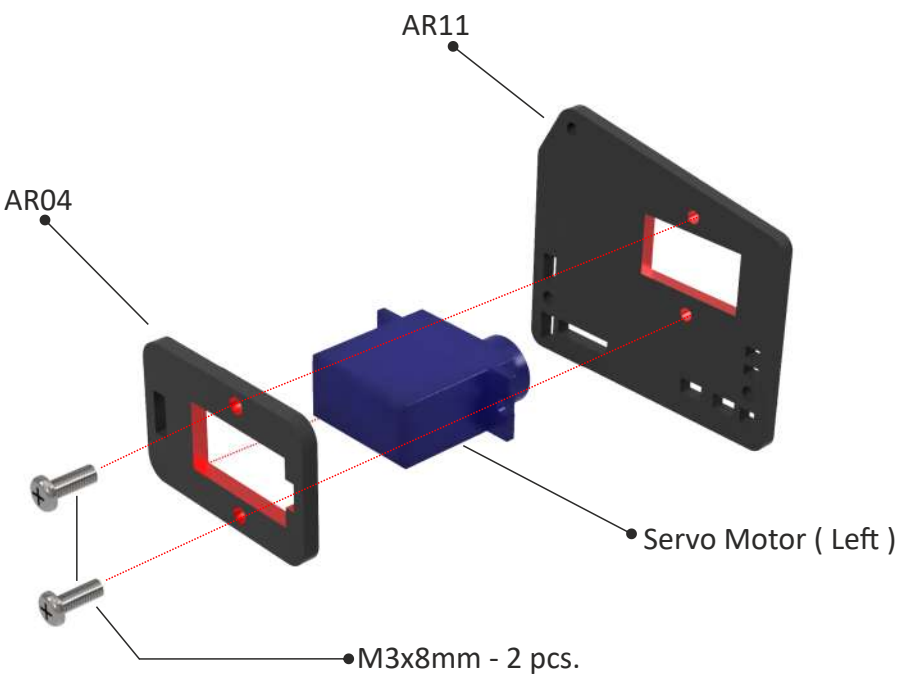 


Assembly Steps

 ⑦

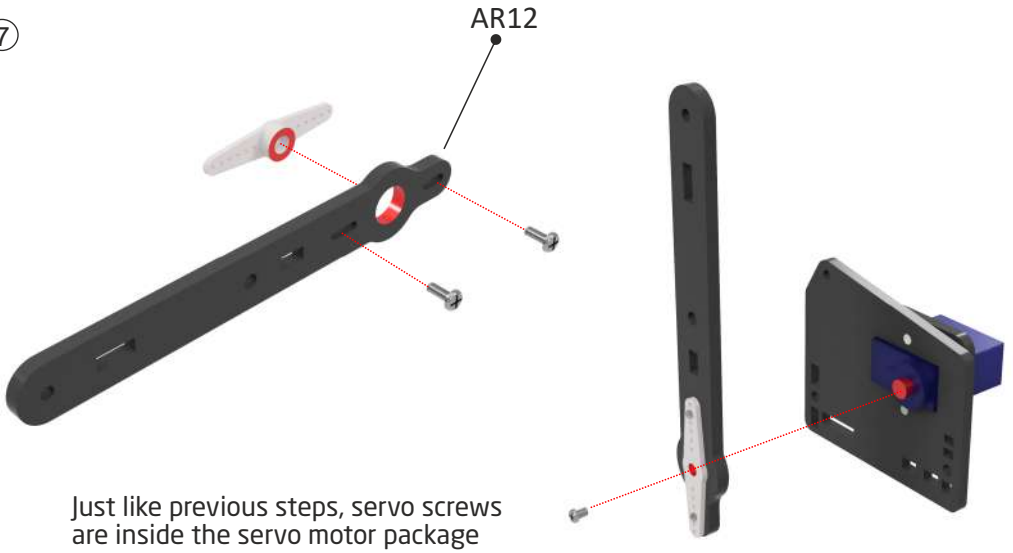

⑧

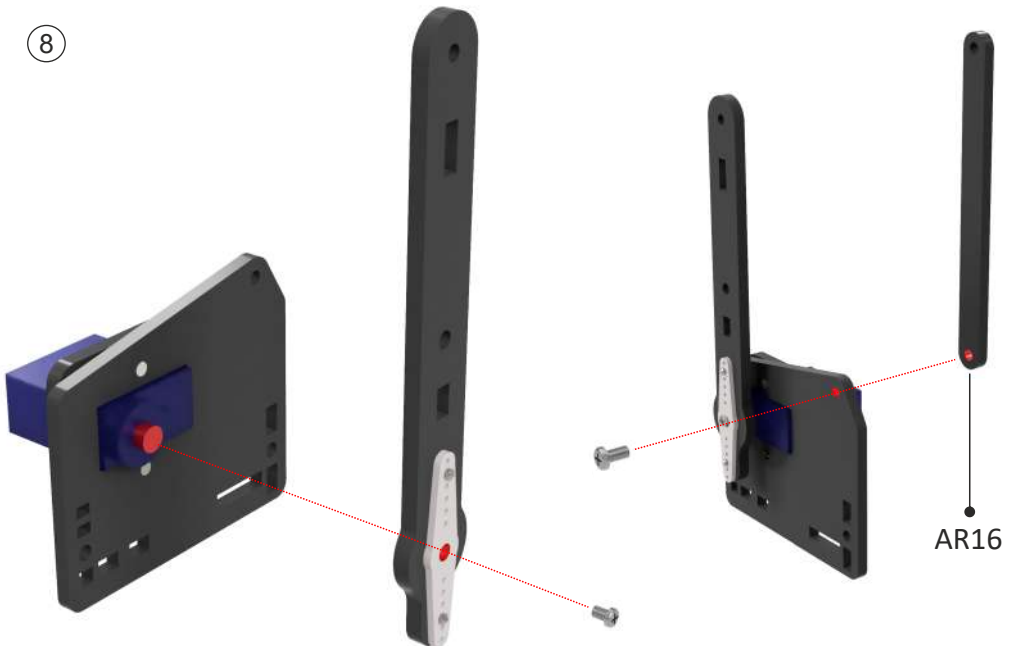 


Assembly Steps

⑨



⑩

 *servo screws are inside the servo motor package

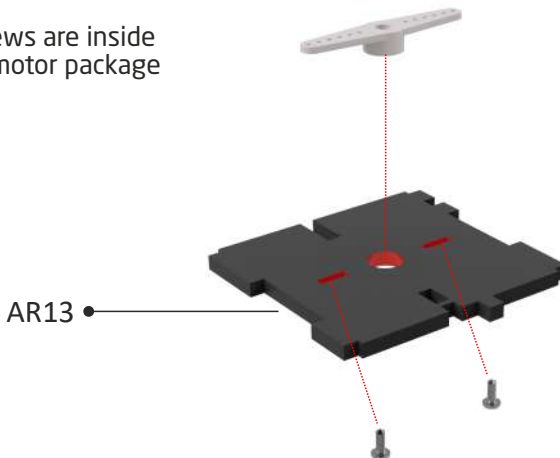

Assembly Steps

 
 
 
 
13



*In order to put together **AR16** and **AR19** its recommended to lift these parts a little bit then use **M3x12mm** screw to tighten them


Assembly Steps

11

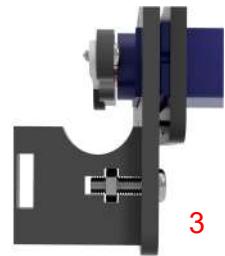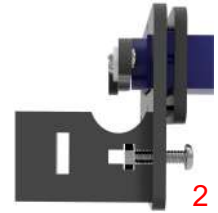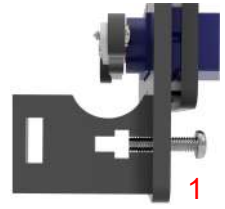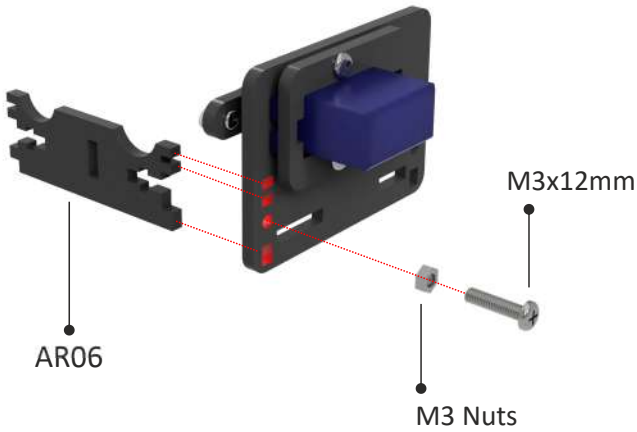


*In order to connect the parts together properly, first insert the screw (1), then put nut inside the referenced nesting (2) then its safe to tighten screw (3).

 12

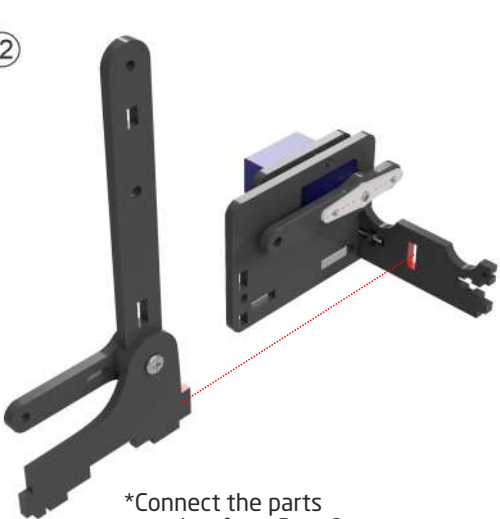



Assembly Steps

 14

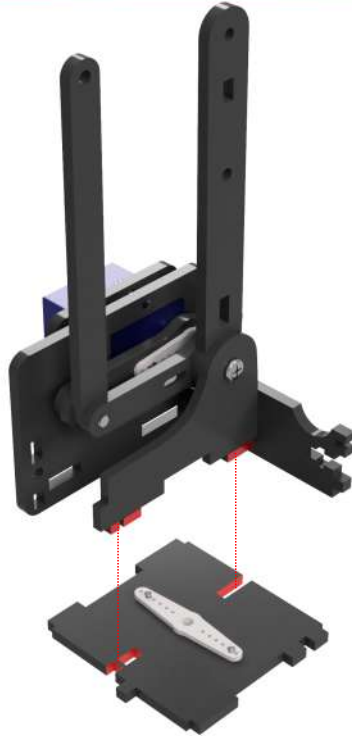

*Connect the parts together from Step 10.

  
15

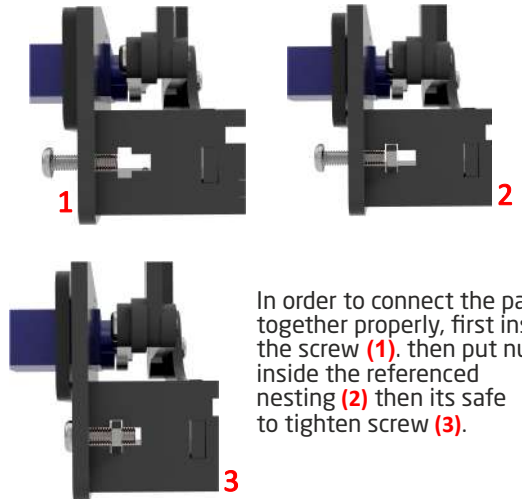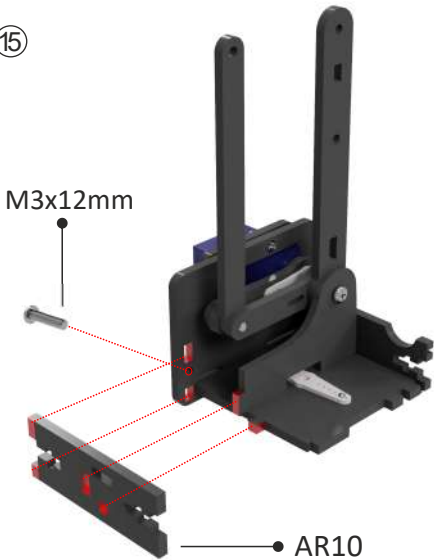

In order to connect the parts together properly, first insert the screw (1), then put nut inside the referenced nesting (2) then its safe to tighten screw (3).

Assembly Steps

 
16

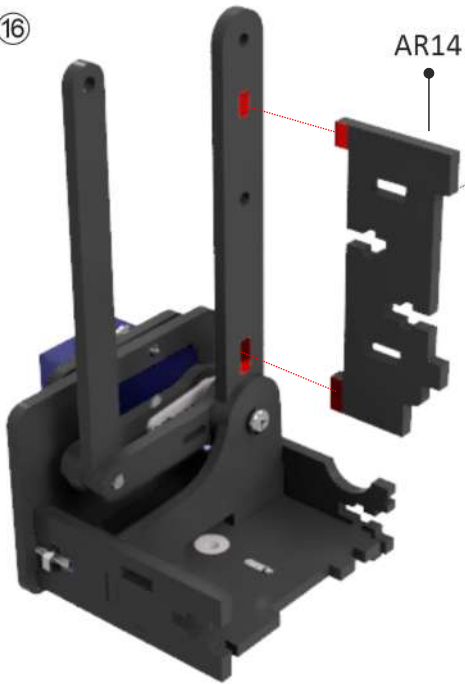


AR14

M3x12mm

 
In order to connect the parts together properly, first insert the screw (1), then put nut inside the referenced nesting (2) then its safeto tighten screw (3).

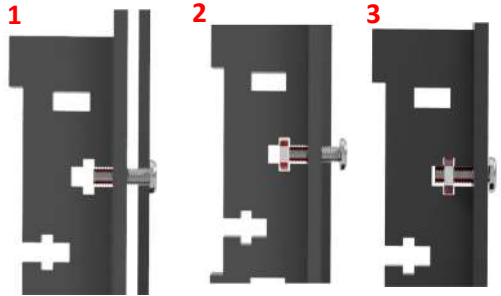

17

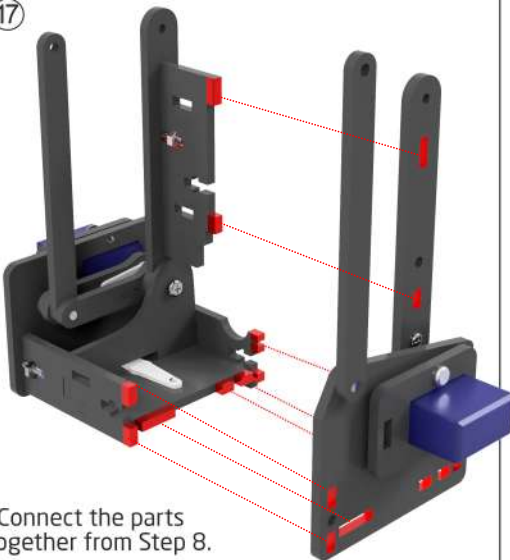 

 
*Connect the parts together from Step 8.

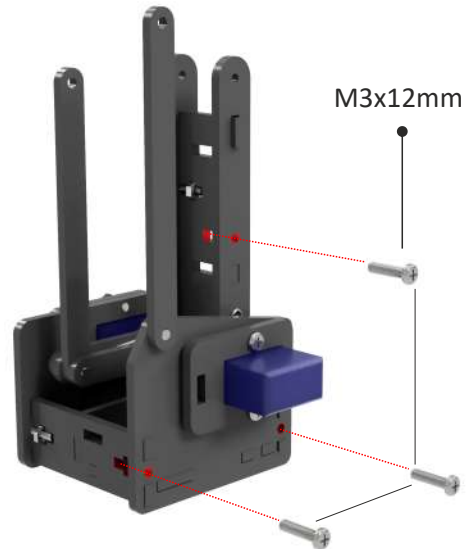


M3x12mm

Assembly Steps

 18

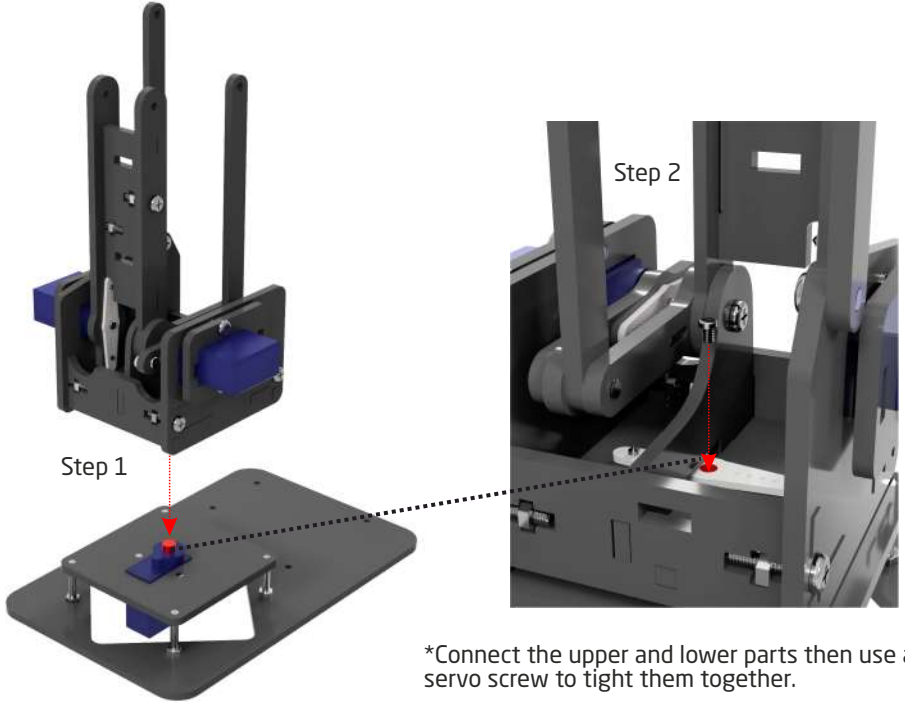


19

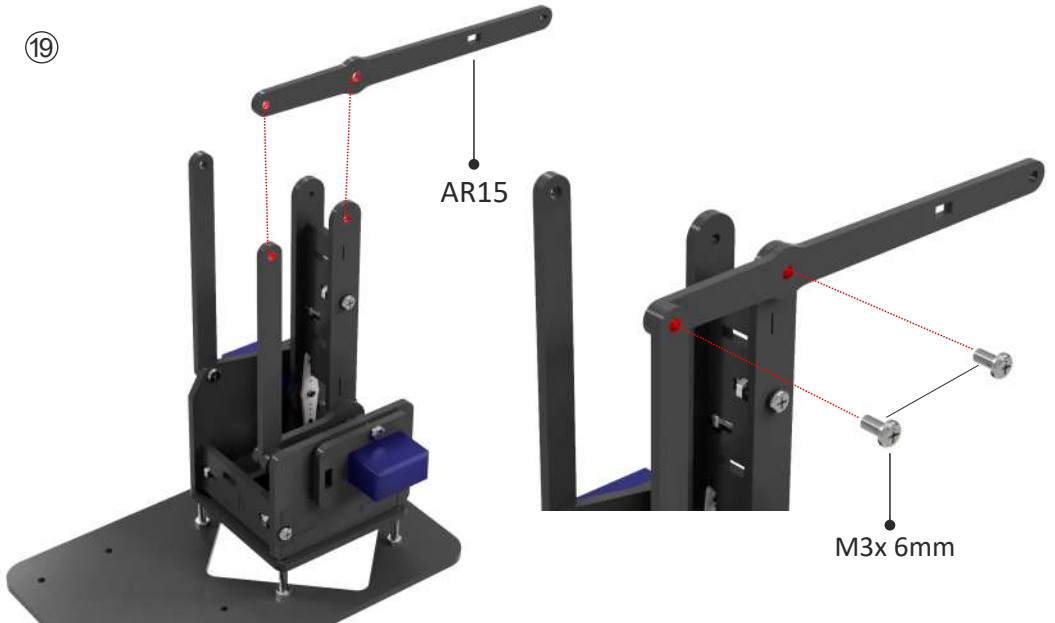 


Assembly Steps

 20

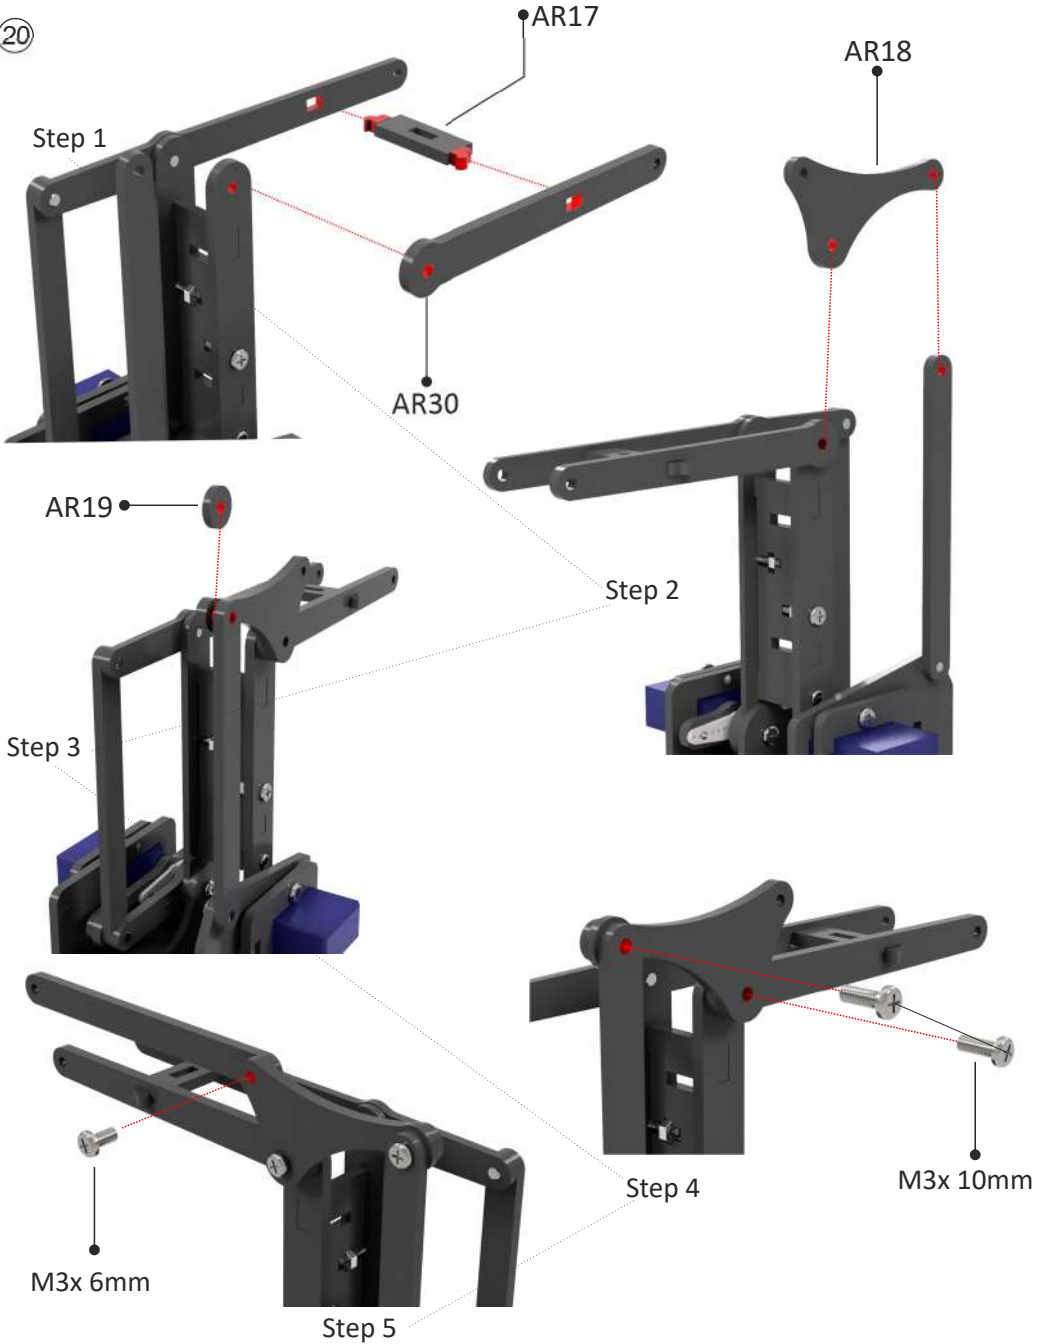


21

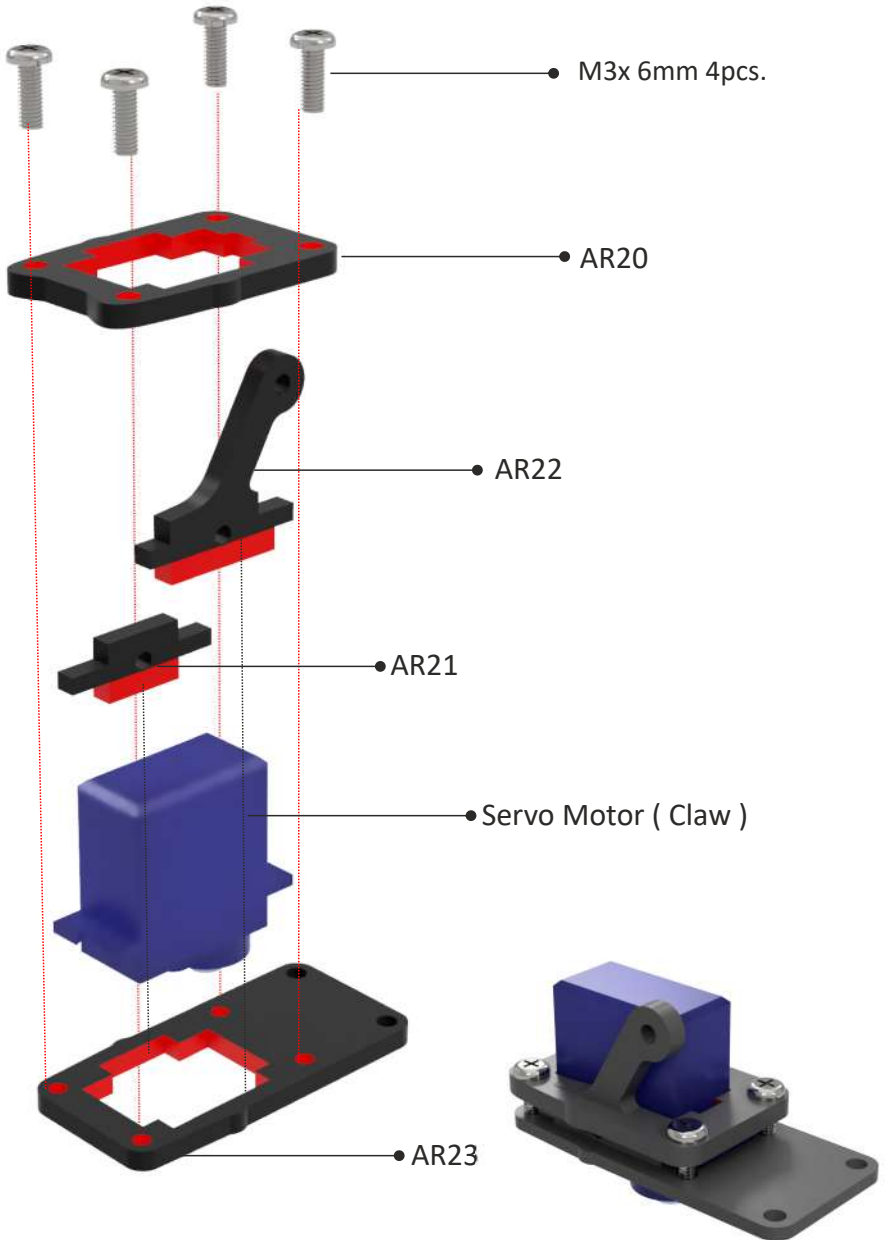 


Assembly Steps

 22

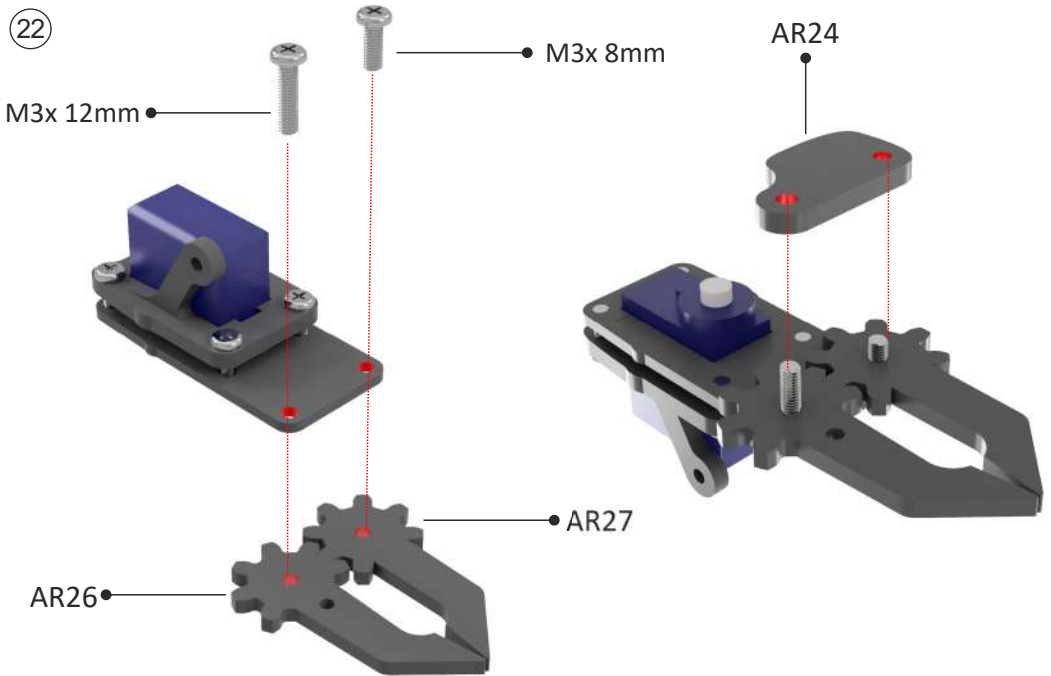


23

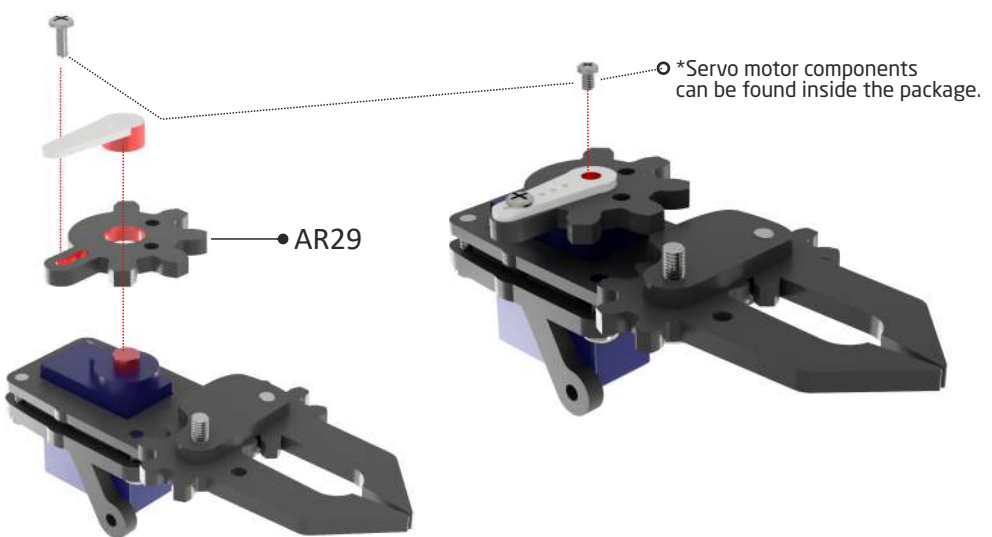 


Assembly Steps

 24

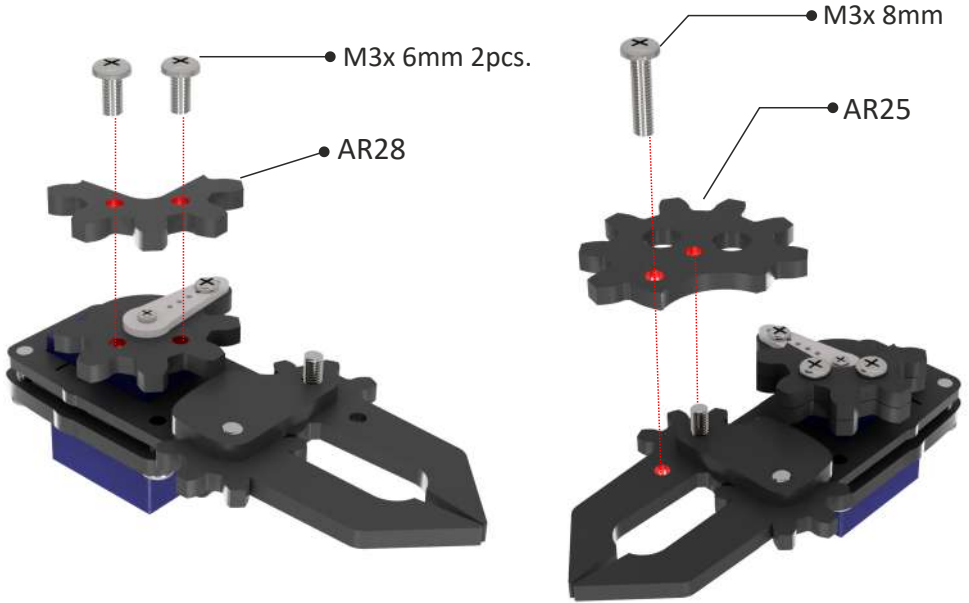


25

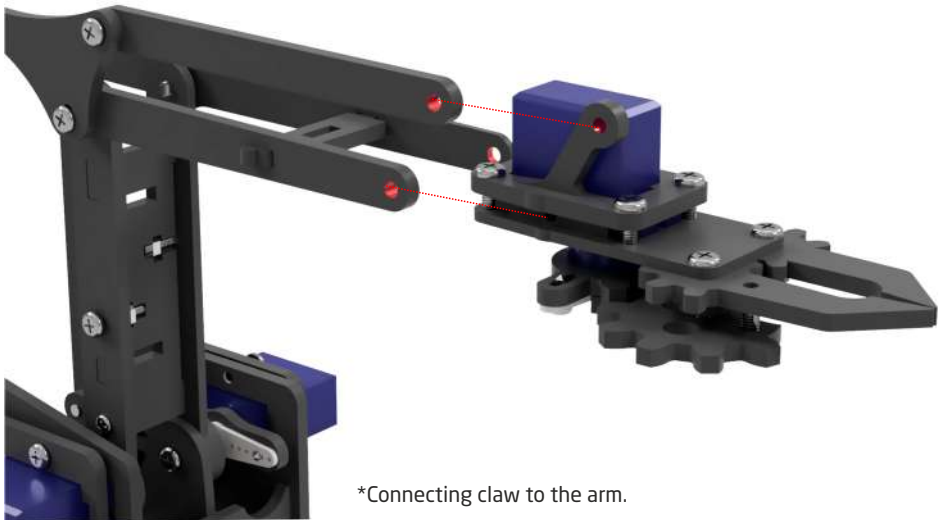 

Assembly Steps


26

 *Put AR19 first then tighten the screws.

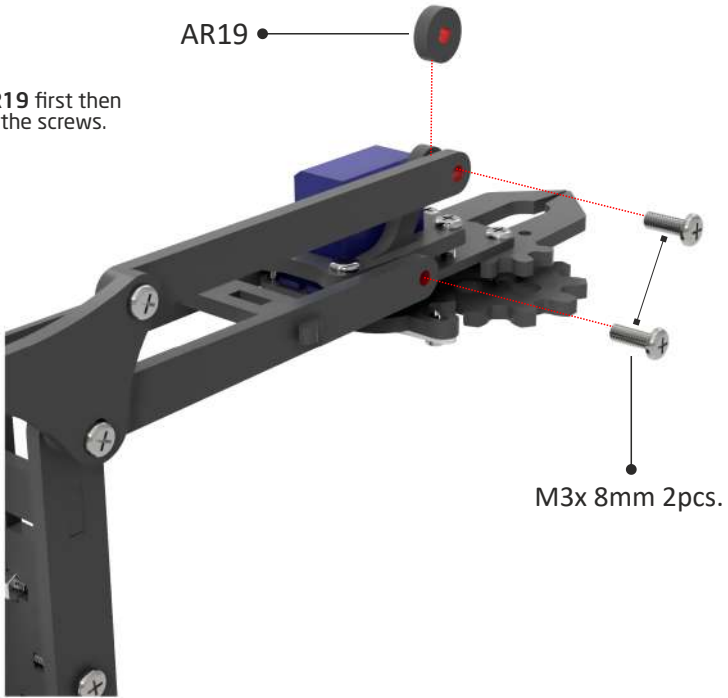

27



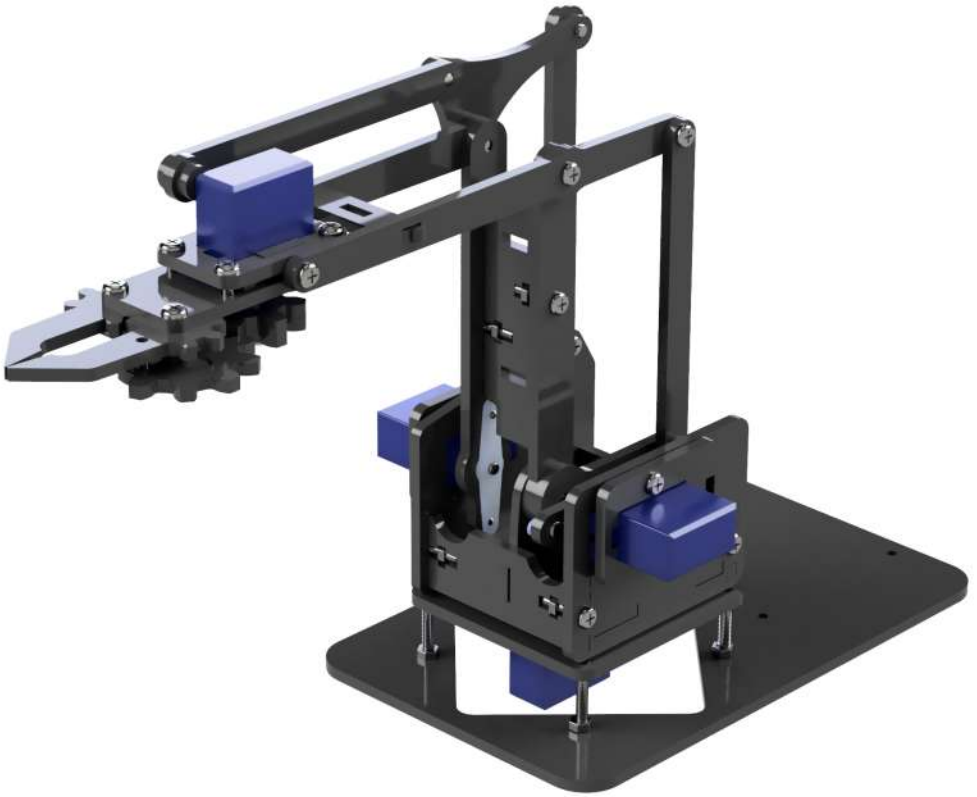 

The robotic arm building is finished and its ready to be equipped for your projects.

We're Here to Help
Feel free to reach out to us at
+90850 766 0 425 or
info@robotistan.com
For further information please visit:



YouTube



youtube.com/robotistan

FORUM

robotistan



forum.robotistan.com

BLOG

robotistan



maker.robotistan.com

Robotistan Elektronik Ticaret A.Ş.

Mehmet AKÇALI (Editor) - Sercan Okay (Graphics, Design, Visuals)
info@robotistan.com - www.robotistan.com

Tel: 0850 766 0 425